YARD-MAN

OUTDOOR POWER EQUIPMENT
for all seasons

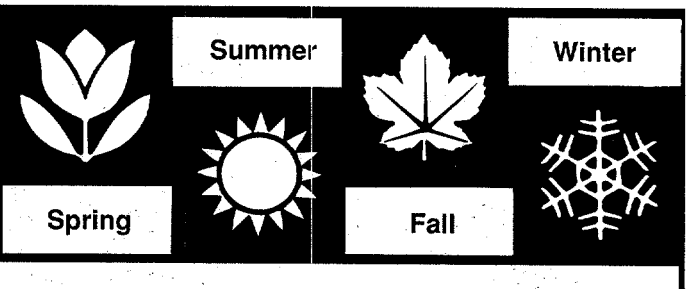

Owner's Manual

- SET-UP
- OPERATION
- MAINTENANCE

18" 2-in-1 RECHARGEABLE ROTARY MOWER

IMPORTANT: The battery pack is shipped in a charged state, but should be charged prior to initial use. Follow charging instructions on page 5.

Model Number 18□-798-401

Thank you for purchasing an American-built product.

IMPORTANT:

Read Safety Rules and Instructions Carefully

INTED IN U.S.A.

770-8924K

FORM NO 273175

IMPORTANT SAFE OPERATION PRACTICES

THIS SYMBOL POINTS OUT IMPORTANT SAFETY INSTRUCTIONS WHICH, IF NOT FOLLOWED, COULD ENDANGER THE PERSONAL SAFETY AND/OR PROPERTY OF YOURSELF AND OTHERS. READ AND FOLLOW ALL INSTRUCTIONS IN THIS MANUAL BEFORE ATTEMPTING TO OPERATE YOUR LAWN MOWER. FAILURE TO COMPLY WITH THESE INSTRUCTIONS MAY RESULT IN PERSONAL INJURY. WHEN YOU SEE THIS SYMBOL— **HEED ITS WARNING.**

DANGER: **Your lawn mower was built to be operated according to the rules for safe operation in this manual. As with any type of power equipment, carelessness or error on the part of the operator can result in serious injury. This lawn mower is capable of amputating hands and feet and throwing objects. Failure to observe the following safety instructions could result in serious injury or death.**

WARNING: When using electric lawn mowers, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and personal injury, including the following:

I. GENERAL OPERATION

1. Read this owner's guide carefully in its entirety before attempting to assemble this machine. Read, understand, and follow all instructions on the machine and in the manual(s) before operation. Be completely familiar with the controls and the proper use of this machine before operating it. Keep this manual in a safe place for future and regular reference and for ordering replacement parts.
2. Your rotary mower is a precision piece of power equipment, not a plaything. Therefore, exercise extreme caution at all times. Your unit has been designed to perform one job: to mow grass. Do not use it for any other purpose.
3. Never allow children under 14 years old to operate a power mower. Children 14 years old and over should only operate mower under close parental supervision. Only responsible individuals who are familiar with these rules of safe operation should be allowed to use your mower.
4. Keep the area of operation clear of all persons, particularly small children and pets. Stop motor when they are in the vicinity of your mower to help prevent blade contact or thrown object injury. Although the area of operation should be completely cleared of foreign objects, an object may have been overlooked and could be accidentally thrown by the mower in any direction and cause serious personal injury to the operator or any others allowed in the area.
5. Thoroughly inspect the area where the equipment is to be used. Remove all stones, sticks, wire, bones, toys and other foreign objects which could be picked up and thrown by the mower in any direction and cause serious personal injury to the operator or any others allowed in the area. Plan your mowing pattern to avoid discharge of material toward roads, sidewalks, bystanders and the like. To help avoid a thrown objects injury, keep children, bystanders and helpers at least 75 feet from the mower while it is in operation.
6. Always wear safety glasses or safety goggles during operation or while performing an adjustment or repair, to protect eyes from foreign objects that may be thrown from the machine in any direction. Use dust mask if cutting operation is dusty.
7. Wear sturdy, rough-soled work shoes and close-fitting slacks and shirts. Shirts and pants that cover the arms and legs and steel-toed shoes are recommended. Do not wear loose fitting clothes or jewelry. They can be caught in moving parts. Never operate a unit in bare feet, sandals, or sneakers.
8. Do not put hands or feet near or under rotating parts. Keep clear of discharge opening at all times as the rotating blade can cause injury.
9. Many injuries occur as a result of the mower being pulled over the foot during a fall. Do not hang on to the mower if you are falling; release the handle immediately.
10. Never pull the mower toward you while you are walking. If you must back the mower away from a wall or obstruction first look down and behind, and then follow these steps:
    a. Step back from the mower to fully extend your arms.
    b. Be sure you are well balanced with sure footing.
    c. Pull the mower back slowly, no more than half way toward you.
    d. Repeat these steps as needed.
11. Do not operate the mower while under the influence of alcohol or drugs. Stay alert—watch what you are doing. Use common sense. Do not operate lawn mower when you are tired.
12. Don't overreach—keep proper footing and balance at all times. Do not force lawn mower—it will do the job better and safer at the rate for which it was designed.
13. The blade control handle is a safety device. Never attempt to bypass its operation. Doing so makes the safety device inoperative and may result in personal injury through contact with the rotating blade. The blade control handle must operate easily in both directions and automatically return to the disengaged position when released.
14. Never operate the mower in wet grass. Always be sure of your footing. A slip and fall can cause serious personal injury. Keep a firm hold on the handle and walk, never run. Mow only in daylight or in good artificial light.
15. Stop the blade when crossing gravel drives, walks or roads.
16. If the equipment should start to vibrate abnormally, stop the motor and check immediately for the cause. Vibration is generally a warning of trouble.
17. Shut the motor off and wait until the blade comes to a complete stop before removing the grass catcher or unclogging the chute. The cutting blade continues to rotate for a few seconds after the motor is shut off. Never place any part of the body in the blade area until you are sure the blade has stopped rotating.
18. Never operate mower without proper guards, grass catcher, plates or other safety protective devices in place. Keep guards in place and in working order.
19. Motor becomes hot and can cause a burn. Do not touch.
20. Only use accessories approved for this machine by the manufacturer. Read, understand, and follow all instructions provided with the approved accessory. Use of other accessories not recommended by the manufacturer might increase the risk of injury. Use only identical Briggs and Stratton #497395 replacement battery pack.
21. Store idle mower indoors when not in use. Lawn mower should be stored in an indoor dry and locked-up place—out of the reach of children.
22. Maintain lawn mower with care. Keep cutting edges sharp and clean for best and safest performance. Keep blade sharp. Keep handles dry, clean and free from oil and grease.
23. Do not charge lawn mower or batteries in rain, or in wet locations.
24. Do not use battery-operated mower in rain.
25. Do not dispose of the batteries in a fire. The cell may explode. Check with local codes for possible special disposal instructions.
26. Do not open or mutilate the batteries. Released electrolyte is corrosive and may cause damage to the eyes or skin. It may be toxic if swallowed.
27. Exercise care in handling batteries in order not to short the battery with conducting materials such as rings, bracelets, and keys. The battery or conductor may overheat and cause burns.
28. If situations occur which are not covered in this manual, use care and good judgment. Contact your dealer for assistance.

II. SLOPE OPERATION

For your safety, use the slope gauge included as part of this manual to measure slopes before operating this unit on a sloped or hilly area. If the slope is greater than 15°, as shown on the slope gauge, do not operate this unit on that area or serious injury could result.

DO:

- Mow across the face of slopes; never up and down. Exercise extreme caution when changing direction on slopes.
- Watch for holes, ruts, hidden objects, or bumps. Tall grass can hide obstacles.
- Always be sure of your footing. A slip and fall can cause serious personal injury.

DO NOT:

- Do not mow near drop-offs, ditches or embankments. The operator could loose footing or balance.
- Do not mow slopes greater than 15° as shown on the slope gauge.
- Do not mow on wet grass. Reduced footing could cause slipping.

III. CHILDREN

Tragic accidents can occur if the operator is not alert to the presence of children. Children are often attracted to the mower and the mowing activity. Never assume that children will remain where you last saw them.

1. Keep children out of the mowing area and under the watchful care of a responsible adult other than the operator.
2. Be alert and turn mower off if a child enters the area.
3. Before and while moving backwards, look behind and down for small children.
4. Never allow children under age 14 to operate the mower.
5. Use extreme care when approaching blind corners, shrubs, trees, or other objects that may obscure your vision of a child or hazard.

IV. SERVICE

1. To reduce fire hazard, keep mower free of grass, leaves, or other debris build-up. Allow mower to cool at least 5 minutes before storing.
2. Remove power key and battery, and make certain the blade and all moving parts have stopped before cleaning, servicing, inspecting or removing material from the lawn mower.
3. Check the blade and motor mounting bolts at frequent intervals for proper tightness. Also, visually inspect blade for damage (e.g., bent, cracked). Replace with blade which meets original equipment specifications.
4. Keep all nuts, bolts, and screws tight to be sure the equipment is in safe working condition.
5. Never tamper with safety devices. Check their proper operation regularly.
6. After striking a foreign object, stop the motor, remove the battery and power key, and thoroughly inspect the mower for any damage. Repair the damage before starting and operating the mower.
7. Never attempt to make a wheel or cutting height adjustment while the motor is running.
8. Mower blades are sharp and can cut. Wrap the blade(s) or wear gloves, and use extra caution when servicing them.
9. Do not attempt to replace individual batteries inside the battery pack. Mixing fresh and discharged batteries could increase internal cell pressure and rupture the discharged battery. Improper wiring within the battery pack could result in leakage or explosion.

OWNER'S MANUAL

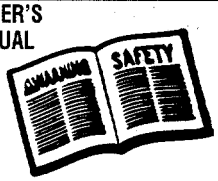

SAFETY LABEL

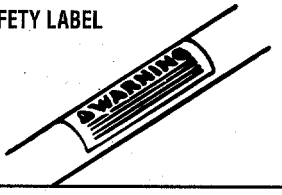

WARNING — ***YOUR RESPONSIBILITY***

Restrict the use of this power machine to persons who read, understand and follow the warnings and instructions in this manual and on the machine.

SAVE THESE INSTRUCTIONS.

SET-UP INSTRUCTIONS

IMPORTANT: Be certain to bring the battery to a full charge before operating your mower. Refer to Operation Section.

NOTE: Reference to right or left hand side of the mower is observed from the operating position.

HOW TO SET-UP YOUR LAWN MOWER

Refer to Illustration Below

1. Open the top flaps of the carton. Remove the carton inserts. Remove the loose parts which include the side discharge chute, two battery packs, battery charger, battery charger lead and power key.
2. Lift the mower from the carton, or cut the corners of the carton and roll the mower out.
3. Pull up and back on the upper handle to raise the handle into the operating position. Remove the packing material which is between the upper and lower handles for shipping purposes.
4. Tighten the two hand knobs on each side of the lower and upper handles.

NOTE: *Your mower is shipped with the handle in the middle height position. To raise or lower the handle, refer to the Adjustment Section of this manual.*

5. Place one battery pack into the opening provided on top of the mower. Push firmly into position.
6. Make certain all fasteners are tightened securely.

Your mower has been shipped as a mulcher. To discharge grass to the side, proceed with step 7.

7. **To convert your mower from a mulcher to a side discharge mower,** remove the two fasteners from the right side of the mower. See inset, below. Remove the mulching cover by lifting up. Place the side discharge chute over the two studs, and firmly secure with fasteners just removed.

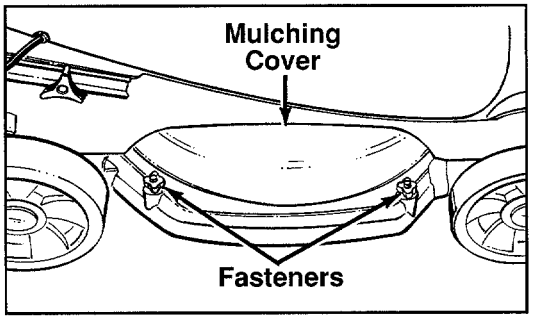

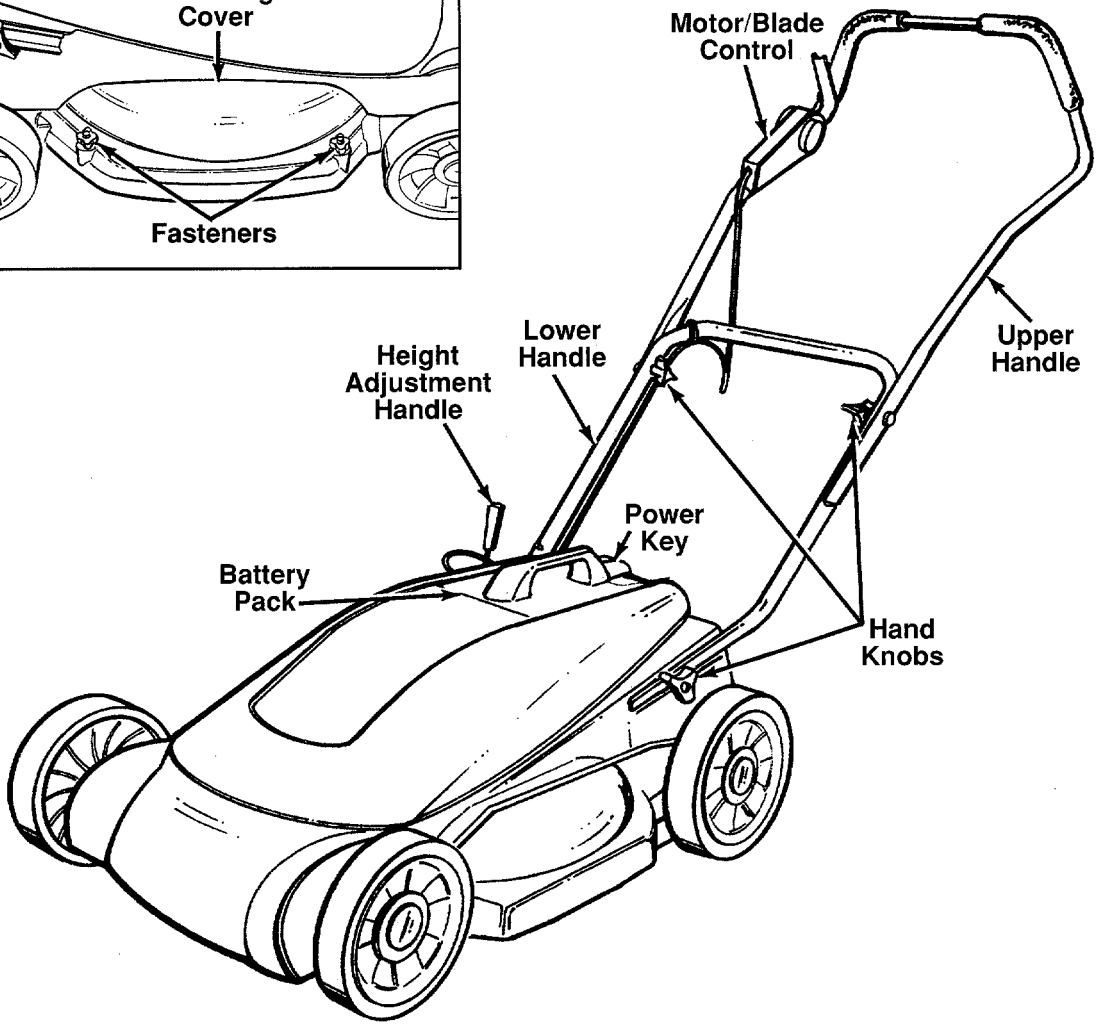

FIGURE 1.

CONTROLS

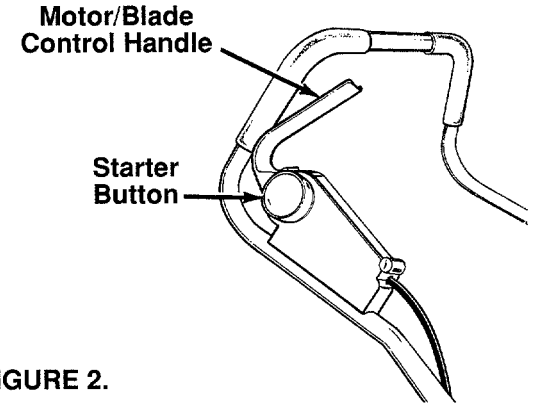

FIGURE 2.

MOTOR/BLADE CONTROL

WARNING: This control mechanism is a safety device. Never attempt to bypass its operations.

The motor/blade control is located on the upper handle of the mower. It engages and disengages the motor and blade. The motor/blade control consists of two parts—a starter button and a motor/blade control handle.

Release the motor/blade control handle to stop the motor and blade.

WARNING: The blade will be rotating whenever the motor is running.

POWER KEY

The power key must be inserted into the key slots switch (located behind the battery pack) before the motor can be started. Refer to figure 1.

OPERATION

The operation of any lawn mower can result in foreign objects being thrown into the eyes, which can result in severe eye damage. Always wear safety glasses or eye shields. We recommend wide vision safety mask for over spectacles or standard safety glasses.

NOTE: *The wheels on your unit are set in a low cutting height position for shipping purposes. For best results, raise the cutting position until it is determined which height is best for your lawn. See cutting height adjustment.*

CHARGING INSTRUCTIONS

WARNING: The battery contains corrosive fluid and toxic material—HANDLE WITH CARE. Keep away from children. Do not puncture, disassemble, mutilate or incinerate. Explosive gases could be vented during charging or discharging. Use in a well-ventilated area, away from sources of ignition.

The lawn mower battery packs have been fully charged at the factory; however, you must recharge the battery packs to a full charge before using your mower for the first time.

Charge battery packs indoors, or in a dry area out of the weather. **Use only the battery charger provided** with the mower (part number 497400). Plug the battery charger into the mower first, then into any standard 110/120 volt household electrical outlet. You may use the battery charger lead provided with your mower to charge both battery packs at once, or charge one battery pack at a time without the lead.

If an extension cord is required, use one marked for outdoor use and is at least wire size 16 AWG. Connect the extension cord to charger before plugging extension cord into electrical outlet.

Always recharge battery packs fully immediately after each use, and every six months if not in use. It takes at least 16 hours to recharge a completely discharged battery; at least 24 hours to recharge both battery packs at once. Red light on the battery charger indicates battery charger is plugged into an electrical outlet; green light indicates battery is fully charged.

It is recommended the battery packs be left on charge continuously between each use, and also during storage. Leaving the battery packs discharged will cause damage to the battery packs.

Always disconnect battery charger (or extension cord if used) from the electrical outlet first, then disconnect battery charger from battery pack.

TO START MOTOR AND ENGAGE BLADE

1. Insert power key into key slots, located on the mower behind the battery pack.
2. Depress starter button on the motor/blade control. Pull motor/blade control handle back against mower handle. Release starter button.

TO STOP MOTOR AND BLADE

1. Release motor/blade control handle to stop the motor and blade.

WARNING: The blade continues to rotate for a few seconds after the motor is shut off.

2. Remove the power key when equipment is unattended.
3. Charge the battery packs.

USING YOUR ROTARY MOWER

WARNING: Do not operate this mower unless either the mulching cover or side discharge chute is properly mounted on the mower.

Be sure that lawn is clear of stones, sticks, wires, or other objects which could damage lawn mower or motor. Such objects could be accidentally thrown by the mower in any direction and cause serious personal injury to the operator and others.

To cut heavy grass, reduce walking speed to allow more effective cut and proper discharge of the clippings. **For a healthy lawn, always cut off one-third or less of the total length of the grass.** The average lawn should be approximately 1-1/2 to 2 inches during the cool season, and over 2 inches during hot months. For a healthier and better looking lawn, cut more often and after moderate growth. The lawn should be cut in the fall as long as there is growth.

For effective mulching, do not cut wet grass because it tends to stick to the underside of the deck, preventing proper mulching of grass clippings. New or thick grass may require a narrower cut. The ground speed should be adjusted to the condition of the lawn.

ELECTRONIC CUT-OUT SWITCHES

Overload Cut-Out Switch

The mower is equipped with an electronic device that stops the mower if it is over-loaded. You must unclog mower deck (first remove power key and battery pack) and raise the cutting height or make a narrower cutting swath. To restart, place the mower on a flat surface or previously cut grass, and start the mower as instructed on page 5.

Low-Voltage Cut-Out Switch

The mower is equipped with an electronic device that stops the mower if battery charge becomes excessively low. This would occur after an extended period of mowing, when the blade speed becomes slow. Before restarting the mower, replace the battery pack with a fully charged battery pack (the discharged battery pack should be recharged immediately to avoid damage to the battery pack).

WARNING: If you strike a foreign object, stop the motor. Remove the power key, thoroughly inspect the mower for any damage, and repair the damage before restarting and operating the mower. Extensive vibration of the mower during operation is an indication of damage. The unit should be promptly inspected and repaired.

ADJUSTMENTS

WARNING: Do not at any time make any adjustment to lawn mower without first stopping motor and removing the power key and battery pack.

CUTTING HEIGHT ADJUSTMENT

The height adjustment handle is located on the right side of the deck. The handle may be placed in one of five cutting height positions. Pull the handle toward the wheel and then either forward to raise the cutting height or backward to lower the cutting height. See figure 3.

For rough or uneven lawns, move the height adjustment handle to a position which will give a higher cutting height.

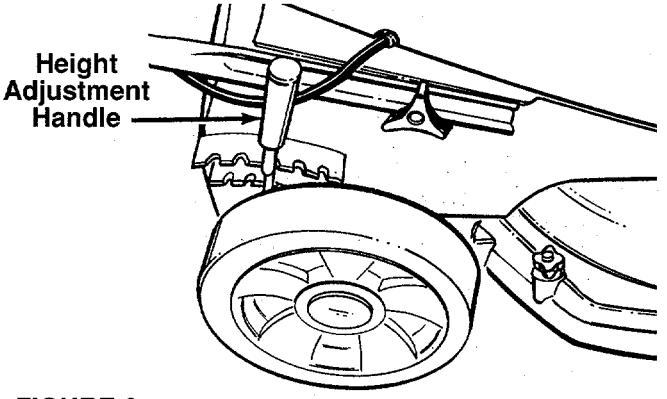

FIGURE 3.

HANDLE HEIGHT ADJUSTMENT

Three holes in the upper handle provide handle height adjustment. See figure 4. The mower is shipped with the handle in the middle height position. To change the height of the handle, proceed as follows.

Remove two hand knobs and carriage bolts which secure upper handle to lower handle. To raise handle height, align bottom holes in upper handle with holes in lower handle; to lower handle height, align top holes in upper handle with holes in lower handle.

When height has been selected, secure upper and lower handles using carriage bolts and hand knobs just removed.

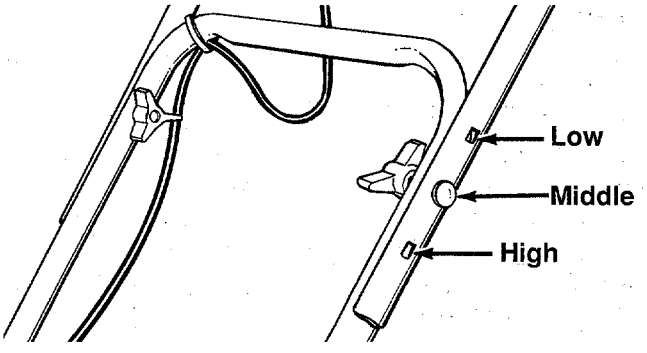

FIGURE 4.

MAINTENANCE

WARNING: Be sure to stop motor and remove power key and battery pack before performing any repairs or maintenance.

TROUBLE SHOOTING

Refer to page 8 of this manual for trouble shooting information.

CIRCUIT BREAKER

A circuit breaker is located to the left of the power key on top of the mower. This breaker may trip under certain conditions such as cutting under overload conditions, or short circuiting of the wiring. A tripped circuit breaker is indicated if the mower will not run, and the white circuit breaker reset button is projecting up into the transparent rubber boot. If this occurs, the breaker may be reset by depressing the rubber boot and reset button. If the circuit breaker does not reset, or if it trips repeatedly under normal cutting conditions, the mower should be examined at an authorized service location.

CUTTING BLADE

When removing the cutting blade for sharpening or replacement, protect hands by using heavy gloves or a rag to grasp the cutting blade. Remove the bolt and washer which hold the blade and adapter to the motor crankshaft. Remove the blade and adapter from the crankshaft.

WARNING: Periodically inspect the blade adapter for cracks, especially if you strike a foreign object. Replace when necessary.

When sharpening the blade, follow the original angle of grind as a guide. It is extremely important that each cutting edge receives an equal amount of grinding to prevent an unbalanced blade. An unbalanced blade will cause excessive vibration when rotating at high speeds, may cause damage to the mower and could break, causing personal injury.

The blade can be tested by balancing it on a round shaft screwdriver. Remove metal from the heavy side until it balances evenly.

Before reassembling the blade and the blade adapter to the unit, lubricate the motor crankshaft and the inner surface of the blade adapter with light oil (or engine oil). When replacing the blade, be sure to install the blade with the stiffening ribs on blade facing toward the mower.

Blade Mounting Torque

Center Bolt: 200 in. lbs. min., 250 in. lbs. max.

To insure safe operation of your unit, **all** nuts and bolts must be checked periodically for correct tightness.

CLEANING

Remove power key. Wipe mower clean with a dry cloth. Periodically remove the battery pack and wipe battery cavity clean (do not use water).

Clean the underside of the mower deck after each use. Tilt the mower forward or on its side, and scrape clean with a suitable tool (make certain power key and battery pack have been removed).

OFF-SEASON STORAGE

The following steps should be taken to prepare lawn mower for storage.

1. Clean mower thoroughly as described previously.
2. **Store mower fully charged.** We strongly suggest that the mower be plugged in whenever not in use.

IMPORTANT: All batteries discharge during storage. Leaving the battery pack discharged will damage the battery pack.

Recharge battery pack immediately after each use and every two months, or better yet, leave plugged in.

3. Coat mower's cutting blade with chassis grease to prevent rusting.

NOTE: *When storing any type of power equipment in an unventilated or metal storage shed, care should be taken to rust-proof the equipment. Using a light oil or silicone, coat all moving parts.*

4. Store mower in a dry, clean area. Do not store next to corrosive materials, such as fertilizer.

HANDLE STORAGE

The handle assembly may be folded away completely for storage. To fold the handle assembly, loosen the hand knobs which secure the lower handle to the deck. Refer to figure 1. Fold the entire handle assembly forward and down over the mower until the grips are resting on the ground. Then loosen the knobs which secure the upper handle to the lower handle, and fold the upper handle backward until it rests on top of the mower. As you fold the handles, make sure the knobs are loosened adequately, and be careful not to pinch the cable.

To place the handle assembly in the operating position, pull up and back on the upper handle until it is raised to the operating position, and tighten the four hand knobs securely. Be careful not to pinch the cable when unfolding the handles.

IMPORTANT: Be careful not to kink the cable at any time, which could damage the unit and render the controls inoperative.

TROUBLE SHOOTING GUIDE

WARNING: Be certain to remove power key and battery pack before performing any adjustment or repair.

Trouble	Possible Cause(s)	Corrective Action
Motor fails to start	1. Power key not inserted. 2. Motor/blade control handle disengaged. 3. Battery discharged. 4. Mower deck clogged with grass and debris. 5. Tripped circuit breaker.	1. Insert power key. 2. Depress starter button and motor/blade control handle. 3. Charge battery. 4. Unclog mower deck. Make certain blade is free to move. 5. Reset circuit breaker.
Mower stops while mowing	1. Discharged battery. 2. Cutting too much grass. 3. Clogged deck.	1. Charge battery. 2. Raise cutting height. 3. Unclog mower deck. Raise cutting height, or cut a narrower swath.
Excessive vibration	1. Cutting blade loose or unbalanced. 2. Bent cutting blade.	1. Tighten blade and adapter. Balance blade. 2. Replace blade.
Mower will not mulch grass	1. Mower deck clogged. 2. Wet grass. 3. Excessively high grass. 4. Dull blade.	1. Unclog mower deck. Make certain blade is free to move. 2. Do not mow when grass is wet; wait until later to cut. 3. Mow once at a high cutting height, then mow again at desired height or make a narrower cutting swath (1/2 width). 4. Sharpen or replace blade.
Uneven cut	Dull blade.	Sharpen or replace blade.

Note: For repairs beyond the minor adjustments listed above, contact your nearest authorized service dealer.

NOTE: The use of any accessory on this walk-behind mower other than those manufactured by the mower manufacturer is not recommended and might increase the risk of injury.

WARNING: To reduce the risk of injury, do not operate mower unless side guard and rear trailing shield are in their proper places.

USE THIS PAGE AS A GUIDE TO DETERMINE SLOPES WHERE YOU MAY NOT OPERATE SAFELY.

SLOPE GAUGE

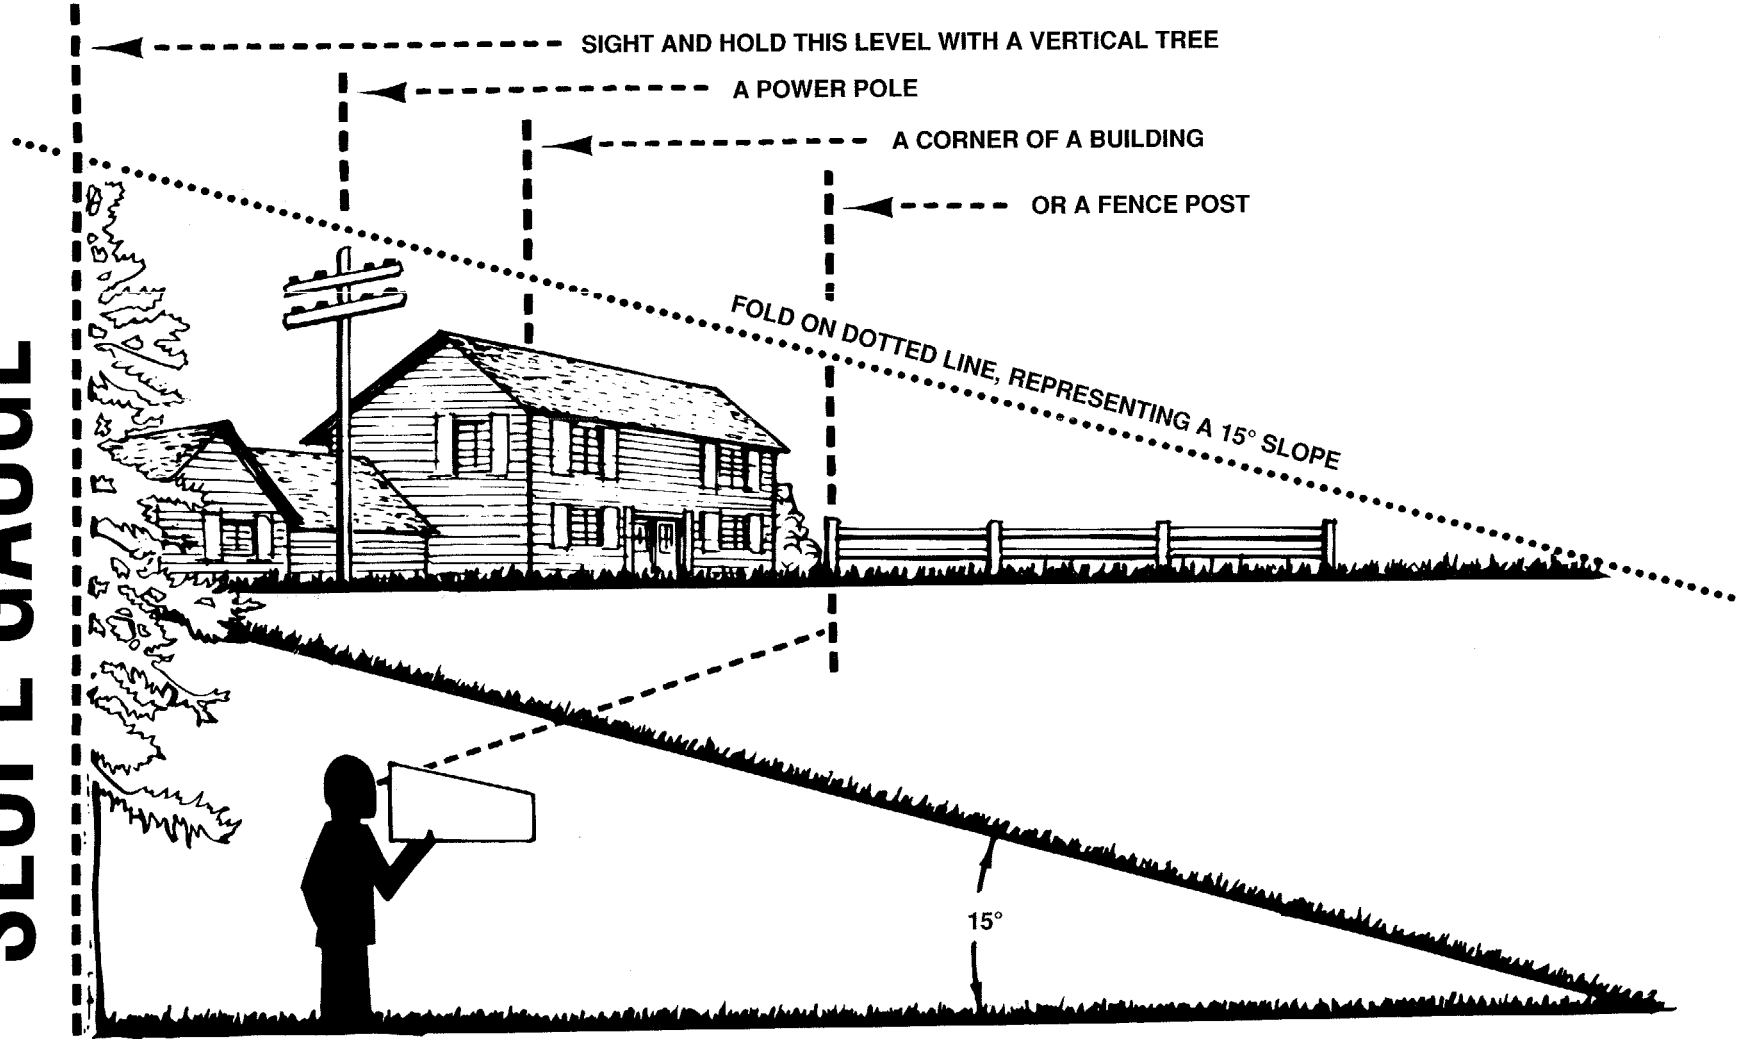
SIGHT AND HOLD THIS LEVEL WITH A VERTICAL TREE
A POWER POLE
A CORNER OF A BUILDING
OR A FENCE POST
FOLD ON DOTTED LINE, REPRESENTING A 15° SLOPE
15°

WARNING

Do not mow on inclines with a slope in excess of 15 degrees (a rise of approximately 2-1/2 feet every 10 feet). A riding mower could overturn and cause serious injury. If operating a walk-behind mower on such a slope, it is extremely difficult to maintain your footing and you could slip, resulting in serious injury.

Operate RIDING mowers up and down slopes, never across the face of slopes.

MANUFACTURER'S LIMITED WARRANTY

For TWO YEARS from the date of retail purchase within the United States of America, its possessions and territories, YARD-MAN will, at its option, repair or replace, for the original purchaser, free of charge, any part or parts found to be defective in material or workmanship. This warranty covers units which have been operated and maintained in accordance with the owner's instructions furnished with the unit, and which have not been subject to misuse, abuse, commercial use, neglect, accident, improper maintenance or alteration.

Normal wear parts or components thereof are subject to separate terms as noted below in the "No Fault Ninety Day Consumer Warranty" clause.

Two year consumer warranty on normal wear parts with ninety day no fault protection. All normal wear part failures will be covered on this product for a period of 90 days regardless of cause. After 90 days but within the two year warranty period, normal wear parts failures will be covered if caused by defects in material or workmanship of other component parts. Normal wear parts are defined as belts, blades, blade adapters, grass bags, rider deck wheels, seats and tires.

How to obtain service: Warranty service is available, with proof of purchase, through your local authorized service dealer. To locate the dealer in your area, please check the yellow pages or contact the Customer Service Department of YARD-MAN, P.O. Box 368022, Cleveland, Ohio 44136-9722. Phone 1 (800) YARD-MAN. The return of a complete unit will not be accepted by the factory unless prior written permission has been extended by the service department of YARD-MAN.

Transportation charges: Transportation charges for the movement of any power equipment unit or attachment are the responsibility of the purchaser.

Units exported out of the United States: YARD-MAN does not extend any warranty for products sold or exported outside of the United States of America, its possessions and territories, except those sold through YARD-MAN'S authorized channels of export distribution.

Other Warranties:

1. The motor and battery pack system or component parts thereof carry separate warranties from their manufacturer. Please refer to the manufacturer's warranty on these items, listed on page 11.
2. Log splitter pumps, valves and cylinders or component parts thereof are covered by a one year warranty.
3. All other warranties, express or implied, including any implied warranty of merchantability or fitness for a particular purpose, are hereby expressly disclaimed in their entirety.
4. The provisions as set forth in this warranty provide the sole and exclusive remedy of YARD-MAN'S obligations arising from the sales of its products. YARD-MAN will not be liable for incidental or consequential loss or damage.

How state law relates to this warranty: This limited warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Certain disclaimers are not allowed in some states and therefore they may not apply to you under all circumstances.

NOTE: This warranty does not cover routine maintenance items such as lubricants, filters, blade sharpening and tune-ups, or adjustments such as brake adjustments, clutch adjustments or deck adjustments. Nor does this warranty cover normal deterioration of the exterior finish due to use or exposure.

BRIGGS & STRATTON MOTOR AND BATTERY PACK SYSTEM WARRANTY EFFECTIVE JANUARY 1, 1995

LIMITED WARRANTY

"Briggs & Stratton Corporation will repair or replace, free of charge, this component part, or parts of the lawn mower as listed below, that are defective in material or workmanship or both. This warranty is effective for the time periods and subject to the conditions provided for in this policy. For warranty service contact your nearest Authorized Service Dealer listed in the 'Yellow Pages™' under 'Lawn Mowers' or similar category. Transportation charges and parts submitted for repair or replacement under this warranty must be born by purchaser. THERE IS NO OTHER EXPRESS WARRANTY. IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE LIMITED TO ONE YEAR FROM PURCHASE, OR TO THE EXTENT PERMITTED BY LAW ANY AND ALL IMPLIED WARRANTIES ARE EXCLUDED. LIABILITY FOR CONSEQUENTIAL DAMAGES UNDER ANY AND ALL WARRANTIES ARE EXCLUDED TO THE EXTENT EXCLUSION IS PERMITTED BY LAW. "Some states do not allow limitations on how long an implied warranty lasts, and some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation and exclusion may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state."

WARRANTY PERIOD

COMPONENT	
BATTERY PACK SYSTEM (motor, circuit board, key, charger)	2 years
Battery Pack	1 year

This Warranty shall only apply to "consumer use" which means personal residential household use by the original retail consumer.

NO WARRANTY REGISTRATION CARD IS NECESSARY TO OBTAIN WARRANTY ON BRIGGS & STRATTON ENGINES. YOU MUST SAVE THE PURCHASE RECEIPT. A PROOF OF PURCHASE DATE WILL BE REQUIRED TO OBTAIN WARRANTY.

Copy the information from your model plate here:

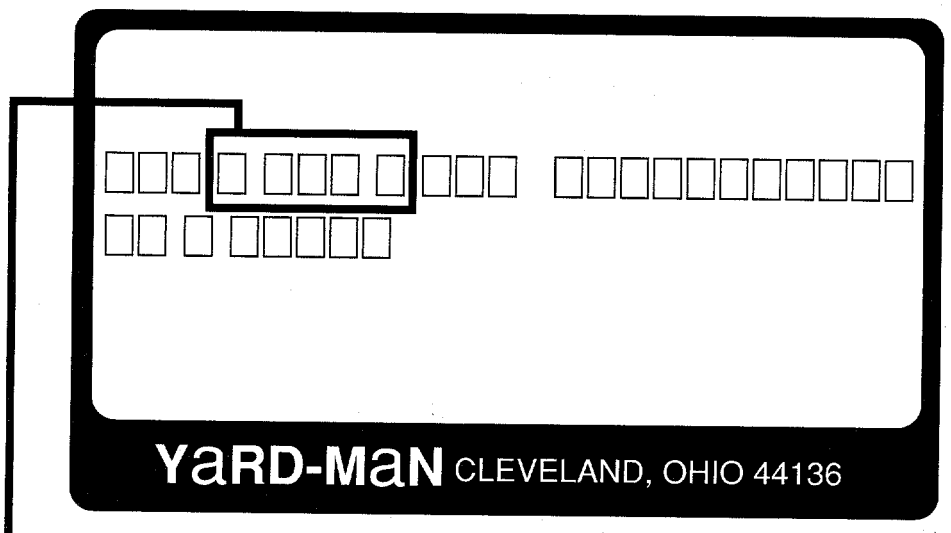

Please help us help you!

Have your model number available when you call

Model No.	-798-
Power Key	751B497399
Blade	751B225145
Blade Mounting Bolt	751B94932
Blade Bolt Washer	751B90366
Mulching Cover	751B497869
Side Chute Deflector	751B497870
Battery Pack	497395
Battery Charger	497400

The only way to insure the performance of your product is to use original equipment parts and accessories, which are designed and engineered to exacting specifications. When you substitute, you take a chance on quality, reliability, safety and performance. Use original equipment parts—See your local service dealer.

MasterCard

VISA

DISCOVER

For Parts, Accessories or Service Information,

CALL NOW!

1(800) 800-7310

8:00 AM to 8:00 PM Eastern Time
Monday through Saturday
(off-season hours may vary)